


Exclusively from your Caterpillar® dealer

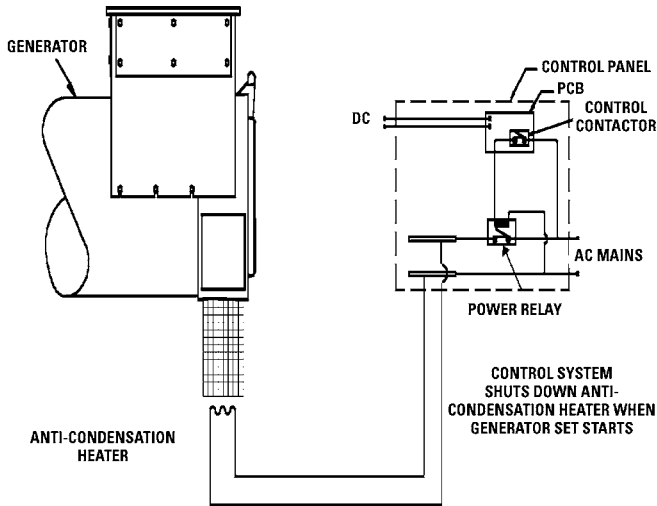

GENERATOR ANTI-CONDENSATION HEATER AH1H

Appropriate when the generating set is to be sited in a low ambient and/or high humidity environment, the heater maintains the air around the windings at a suitable temperature to prevent winding corrosion due to condensation.

The heater itself is powered by a 110-120 volt (VAC120) or 208-240 volt (VAC240) AC auxiliary supply, protected by a fuse inside the main control panel. When the generating set is not running, the heater is automatically connected to the AC supply through a power relay mounted in the control panel. Upon receiving a start signal the AC supply is automatically disconnected by the power relay and automatically reconnected when the start signal is removed.