


Exclusively from your Caterpillar® dealer

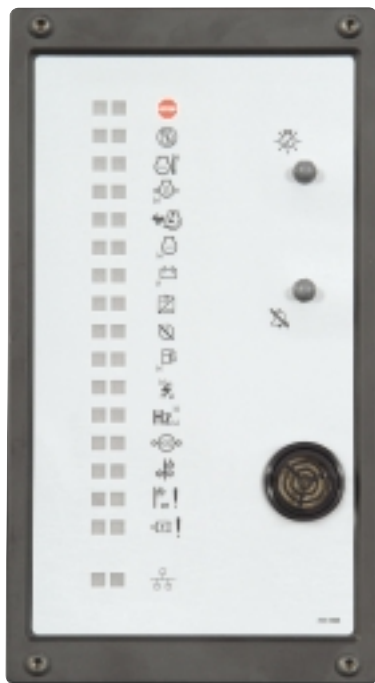

ANNUNCIATOR

The PowerWizard Annunciator is a 16-channel display unit for remotely indicating the status of a generating set fitted with the PowerWizard 2.0 panel. The annunciator communicates with the PowerWizard 2.0 panel via the accessory J1939 data link and can be mounted up to 240 metres away from the generating set.


Each channel on the annunciator has two LED's and can be individually configured to read status and alarm signals from the PowerWizard 2.0 panel using the Electronic Service Tool. An additional pair of LED's displays status indication of the J1939 data link.

The annunciator includes an audible alarm, an alarm acknowledge pushbutton and a lamp test pushbutton.

Provides a simple means to change the labels for the annunciation LED's for site specific requirements.

Annunciator Dimensions

A	B	C
mm (in)	mm (in)	mm (in)
158 (6.22)	130 (5.12)	288 (11.34)

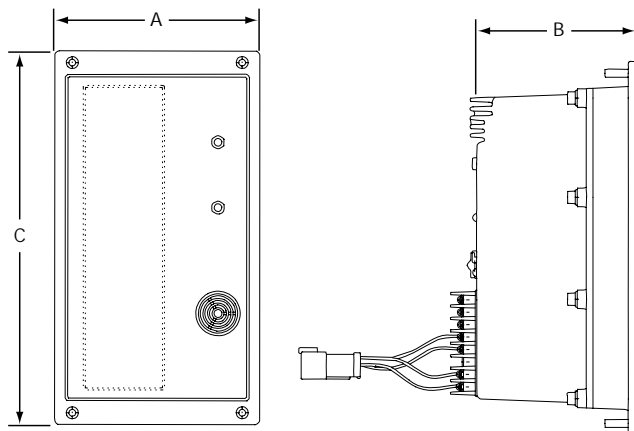

www.CAT-ElectricPower.com

© 2004 Caterpillar
All rights reserved.
Printed in U.S.A.

European sourced

LEXF4912-00 (10/04)

Materials and specifications are subject to change without notice.
The International System of Units (SI) is used in this publication.